

## De Coilers

The wire de coiler operates automatically as and when wire is required by coiling machine. Two separate variable speed adjustments are provided for smooth running with lesser load on the machine. In case the wire gets entangled or cannot be fed due any other reason the wire de coiler trips and coiling machine motors get automatically cutoff preventing from any possible damage



**Model DC 60**

<b>Model</b>	<b>DC 60</b>
Loading plate Diameter	600mm